



Musical Rainbow Tea Party

Lights up in 6 rainbow
colors/colours for learning fun.



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.



Share the Learning

Visit leapfrog.com/learningpath
to see the skills your child is exploring
during play.



Share your special learning moments!
Like us at facebook.com/leapfrog

The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning
progress updates, articles, product news and
special offers from LeapFrog.

leapfrog.com

Fun next steps on your child's path to learning!



Shapes & Sharing Picnic Basket
6-36 months



My Discovery House
6-36 months



Lettersaurus
12-36 months



Poppin' Play Piano
12-36 months



Letter Factory Phonics™
2+ years

Get more ideas to support your child's learning at:
leapfrog.com

Products sold separately, and may not be available in all countries. Actual products may vary.

Core Learning Skills

Lights up in 6 rainbow colors/colours for learning fun.

Colors/Colours & Matching

Explore six colors/colours on pretend cake pieces. Find the correct color/colour slice to serve to guests.

Manners & Greetings

Practice/Practise sharing and social skills. Learn polite words such as *thank you* and *please*.

Social Play

Host a pretend tea party with real or pretend friends. Social pretend play fosters creative expression and imagination and builds communication skills.

Counting

Count along with the teapot while waiting for the imaginary tea to brew. Plus, count along to the correct number of pours of tea.



Instructions for Play



Getting Started

Slide the Off/Low/High selector on the teapot from Off to the desired volume setting. To turn it off, slide the switch selector to Off.

Note: The teapot will turn off automatically after a period of inactivity. You can wake it up again by switching the Off/Low/High selector as well as by pressing the Tea Time Button, lifting the lid or tipping the teapot.

How to Play

Pretend

- Press the heart shaped Tea Time Button to see a magical light show and learn about colors/colours with a fun song, or count along until the “tea” is ready. At the end of each song or counting sequence, the teapot will choose a “flavor/flavour” of tea and guide children to share and match with the cake. To learn about another color/colour, press the Tea Time Button again.

Share

- Tip the pot to pretend to pour tea, hear fun audio and even practice/practise counting!
- Use the cups and cake pieces to share with a friend!

Explore

- Tilt the teapot to pretend pouring tea and hear fun audio. Lift the lid to enjoy a peek-a-boo surprise.
- Play with the cake pieces! Fit the different pieces on the tray, or try to match the color/colour of the cake pieces with the color/colour of the tea in the pot.

Instructions for Care

FOR DRY, INDOOR-LOCATION USE ONLY

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

 **CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

 **ATTENTION:** Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

 **CAUTION:** This product is not suitable for use with food or liquid.

 **ATTENTION:** Ce produit n'est pas destiné à être utilisé avec de la vraie nourriture ou du vrai liquide.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 4 AAA (called LRO3 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

TROUBLESHOOTING

Toy does not turn on or does not respond

- Make sure the Off/Low/High switch is not in Off position
- Make sure the batteries are correctly installed
- Make sure the battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contact
- Install new batteries

FCC NOTICE:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ENVIRONMENTAL PHENOMENA

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPACT DE L'ENVIRONNEMENT

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact:

Visit our U.S. Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact:

Visit our Canada Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact:

Visit our U.K. Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact:

Please submit questions to our support staff via email info@funtastic.com.au

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisant pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

For information on how this product might be recycled, visit www.leapfrog.com/recycle or call (800) 701-5327.

TM & © 2013 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

Recommended for children ages 12-36 months. Convient aux enfants de 12-36 mois.

Item number: 19231

Part number: 605-11982-A

Artwork: 810-23091-A