



# My Own Leaptop™

Learn letters, spell your name and more!



## Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.



## Share the Learning

Visit [leapfrog.com/learningpath](http://leapfrog.com/learningpath)  
to see the skills your child is exploring  
during play.



Share your special learning moments!  
Like us at [facebook.com/leapfrog](http://facebook.com/leapfrog)

The LeapFrog® Learning Path is not available in all countries.

## Register your product online!

You can also sign up to receive learning  
progress updates, articles, product news and  
special offers from LeapFrog.


**[leapfrog.com](http://leapfrog.com)**

## Fun next steps on your child's path to learning!



**Chat & Count  
Smart Phone\***

18+ months

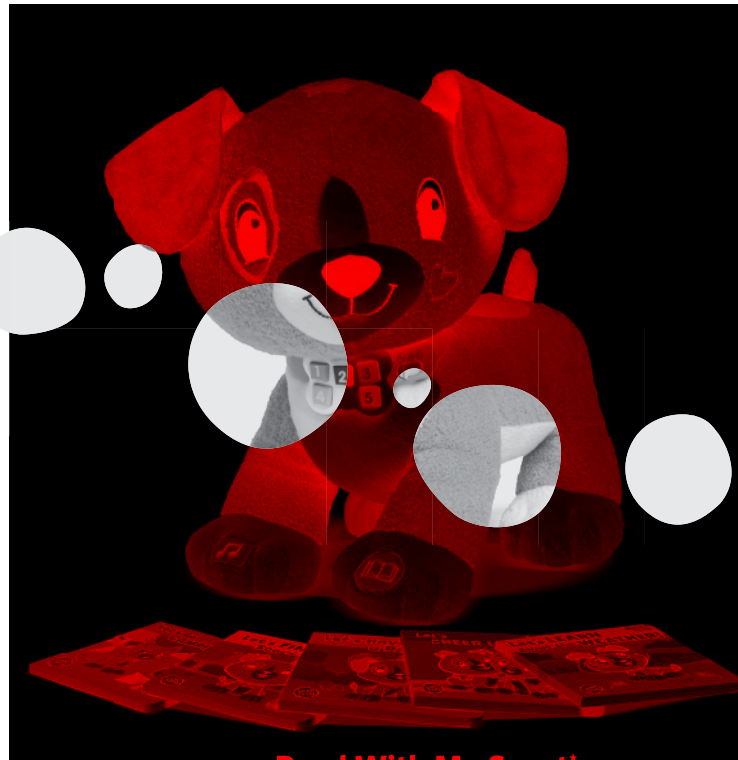

**Read With Me Scout\***

2+ years



**Scribble & Write\***

3+ years

Get more ideas to support  
your child's learning at:  
**[leapfrog.com/learningpath](https://leapfrog.com/learningpath)**

\*Products sold separately, and may not be available  
in all countries. Actual products may vary.

## Core Learning Skills

### Learn letters, spell your name and more!

#### The Alphabet

Press the letter keys to explore the alphabet and letter sounds, and learn about animal names that start with that letter.

#### Early Vocabulary

Press a letter key and play a guessing game to learn about animals, their names, and the sounds they make.

#### Computer Literacy

Become familiar with basic computer terms and interactions with activities such as typing, email messages, and games.



## Instructions for Play

Off/Low/High Switch

ABC Mode

Message Mode

Paw Pad

Game Mode

Music Mode



### Getting Started

To turn on My Own Leaptop™, slide the Off/Low/High switch to one of the two volumes.

**Note:** My Own Leaptop™ will automatically turn off after a period of inactivity.

You can wake it up again by pressing any button.

### How to Personalize My Own Leaptop™

First, turn My Own Leaptop™ off. Next, hold down the "P" and "M" buttons while selecting one of the two volumes. Then follow the instructions given by My Own Leaptop™.

### Learning Modes



#### ABC MODE

Slide the switch to the Alphabet Mode icon to introduce letters and phonics.

Press a letter to hear the letter name, sound, and a word that uses the letter.



#### MESSAGE MODE

Slide the switch to the Message Mode icon to see and hear emails from Scout or Violet.



#### GAME MODE

Slide the switch to the Game Mode icon to play fun animal trivia and letter games.



#### MUSIC MODE

Slide the switch to the Music Mode to listen to songs and melodies and to watch Scout/Violet dance.

### Instructions for Care

#### FOR DRY, INDOOR USE ONLY

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.



**CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.



**ATTENTION:** Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.



**CAUTION:** To be used under the direct supervision of an adult.



**ATTENTION:** Doit être utilisé sous la présence directe d'un adulte.



**CAUTION:** If for any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact LeapFrog Consumer Services for replacement if under warranty.



**ATTENTION:** Si pour quelque raison que ce soit, l'écran (d'affichage) est brisé ou fendu, mettez immédiatement ce produit hors de portée des enfants. Contactez ensuite le Service clientèle de LeapFrog pour qu'il soit remplacé (si ce produit est sous garantie).

## Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

### Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

## Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (e.g., alkaline/standard).

**DO NOT** use rechargeable batteries.

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

## Sécurité relative aux piles

Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** utiliser des piles rechargeables.

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les terminaux d'alimentation.

## TROUBLESHOOTING

### Symptom

Toy does not turn on or does not respond

### Try This

- Make sure the mode switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries, wait 10 seconds and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

### FCC NOTICE:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### ENVIRONMENTAL PHENOMENA

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### IMPACT DE L'ENVIRONNEMENT

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### CONSUMER SUPPORT

#### U.S. Consumer Service Contact:

Visit our U.S. Consumer Support website at [www.leapfrog.com/support](http://www.leapfrog.com/support) 24 hours a day.

#### Canada Consumer Service Contact:

Visit our Canada Consumer Support website at [www.leapfrog.ca/support](http://www.leapfrog.ca/support) 24 hours a day.

#### U.K. Consumer Service Contact:

Visit our U.K. Consumer Support website at [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support) 24 hours a day.

#### Australia Service Contact:

Please submit questions to our support staff via email [info@funtastic.com.au](mailto:info@funtastic.com.au)

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

**GARANTIE LIMITÉE:** Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

**For information on how this product might be recycled, visit [www.leapfrog.com/recycle](http://www.leapfrog.com/recycle) or call (800) 701-5327.**

TM & © 2013 LeapFrog Enterprises, Inc. All rights reserved.

### leapfrog.com

Recommended for children ages 2 years and up. Convient aux enfants à partir de 2 ans.

Item number: 19150 & 19167

Part number: 605-11984-A