



Learn & Groove[®] Dancing Panda[™]



 
Parent's Guide

This guide contains important information. Please keep it for future reference.

91-003685-000-000 (US)

INTRODUCTION

Thank you for purchasing the **Learn & Groove® Dancing Panda™**. Dance along to Panda's cool moves and learn many different preschool skills. Press the four bright light-up instrument buttons to learn about colors and instruments. Jam along with Panda to four learning songs and a variety of dancing tunes. Press the yellow **Bridge** switch to see and hear letter names, letter sounds and numbers. The LED display on Panda's guitar shows animations to teach numbers, letters and shapes.

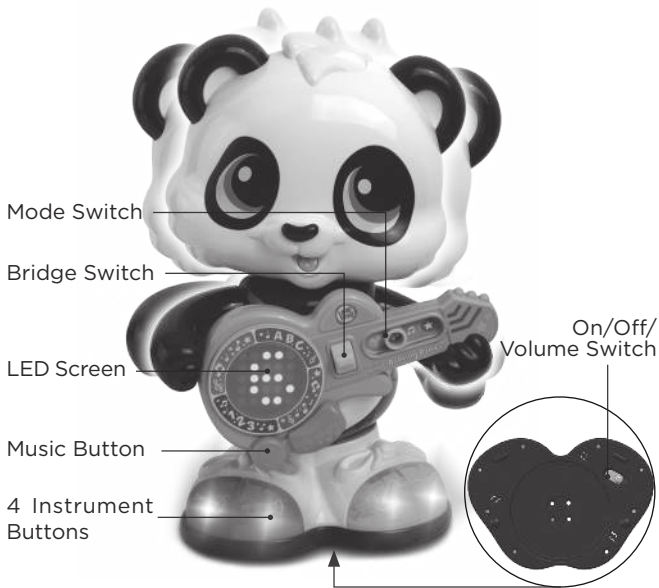

INCLUDED IN THIS PACKAGE

- One **Learn & Groove® Dancing Panda™**
- One parent's guide

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

NOTE :

This product emits flashing lights at 3-60 cycles per second.

Unlock the packaging locks:


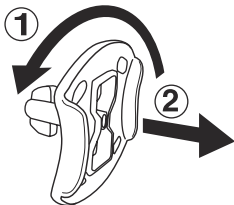


- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock.

ACTIVATE NORMAL PLAY MODE

This product is in try-me mode in the packaging. To activate normal play mode, please complete the following steps:

  1. Slide the **On/Off/Volume Switch** to the **Off ●** position.
2. Slide the **On/Off/Volume Switch** to the **Low** or **High Volume »/»** position to activate normal play mode.

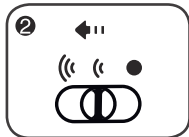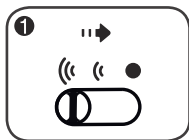

ACTIVATION DU MODE DE JEU NORMAL

 
Ce produit est en mode Démonstration dans son emballage. Pour activer le mode de jeu Normal, merci d'effectuer les étapes ci-dessous :

1. Glisser le **Curseur Marche/Arrêt/Réglage du volume sonore** sur la position **Arrêt ●**.
2. Ensuite, glisser le **Curseur Marche/Arrêt/Réglage du volume sonore** sur la position **Volume faible ou Volume fort »/»** pour activer le mode de jeu Normal.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 4 new AA (AM-3/LR6) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

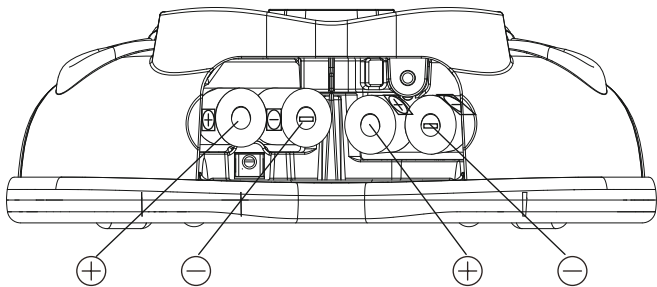

Low Battery

When the batteries are exhausted, the **Learn & Groove® Dancing Panda™** may shut off or restart suddenly. Please replace the batteries with a full set of new batteries before further use.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

 
MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume** switch on the bottom of Panda's shoe to the **Low Volume** or **High Volume** position. To turn the unit **Off**, slide the **Low Volume** or **High Volume** position to the **Off** position.

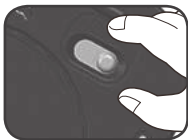

2. Mode Switch

Slide the **Mode** switch to any position to play one of four modes: Letter mode, Number mode, Music mode or Game mode.



3. LED Screen

See numbers, letters, shapes and fun designs on the **LED Screen**. Curricular images change to match the song lyrics to help reinforce the learning.



 
4. Instrument Buttons

Four **Instrument** buttons on Panda's shoes light up and teach colors, musical instrument names and sounds, plus beginning letter sounds such as G is for Guitar!



5. Bridge Switch

In Letter and Number modes, press the yellow **Bridge** switch up and down to scroll through letters and numbers to learn letters, letter sounds and counting. Press the **Bridge** switch in Music mode to play Panda's guitar!

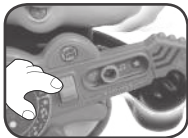

6. Music Button

Press the orange music button to hear five learning songs and dozens of dance tunes. Dance along to learn about shapes, instruments, colors, numbers and letters.



7. Dancing and Spinning Motion

Panda dances to the beat and performs 360-degree spins while he sings learning songs and plays his guitar.



ACTIVITIES:

1. Letter Mode

Learn letters A-Z as toddlers see and hear the letters and letter sounds.

2. Number Mode

Learn numbers 1-10 as toddlers see and hear the numbers.

3. Music Mode

Dance along with Panda to dozens of different tunes.

4. Game Mode

Play freeze dance and guess the number, letter, or shape shown when the music stops.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference

to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

Trade Name:	LeapFrog®
Model:	6082
Product name:	Learn & Groove® Dancing Panda™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	6401 Hollis Street, Suite 100, Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CLASS 1
LED PRODUCT



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

***Read our complete warranty policy online
at leapfrog.com/warranty***

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2019 LeapFrog Enterprises, Inc.
All rights reserved.
91-003685-000-000 