



**My Pal Scout**

**Quick Start Guide**

A cuddly, customizable/customisable puppy pal



**My Pal Violet**

6-36 months

**Parent Guide & Instructions**

This guide contains important information. Please keep it for future reference.

**Solutions for Every Step**



**Roll & Go Rocking Horse**

6-36 months



**AlphaPup**

12-36 months



**Chat & Count**

Smart Phone  
18+ months



**Read With Me Scout**

2-5 years



**My Own Leaptop**

2+ years

Share your special learning moments. Like us on facebook.com/leapfrog

**GET STARTED**

**Step 1**

Go to [leapfrog.com/MyPals2](http://leapfrog.com/MyPals2) on your device (smart phone, tablet or computer). For a list of supported browsers, see System Requirements on the opposite side of this guide.

Create or sign in to your LeapFrog account. Follow the instructions to set up your child's profile. Then select your child's name and favorites/favourites.



**Step 2**

Connect the cable from the battery box to your device's headphone jack. Plug the puppy's cord directly into the 3.5mm jack on your smartphone, tablet or computer. (Do not plug the cord into peripheral or external accessories, such as speakers, docks, etc.)

Follow the webpage instructions to turn your device's audio volume all the way up and to begin the download.




**Step 3**

Once you see the collar light up and hear your puppy say "I'm ready to play now," please disconnect the cable from your device.

"I'm ready to play now."



**DETAILED INSTRUCTIONS**

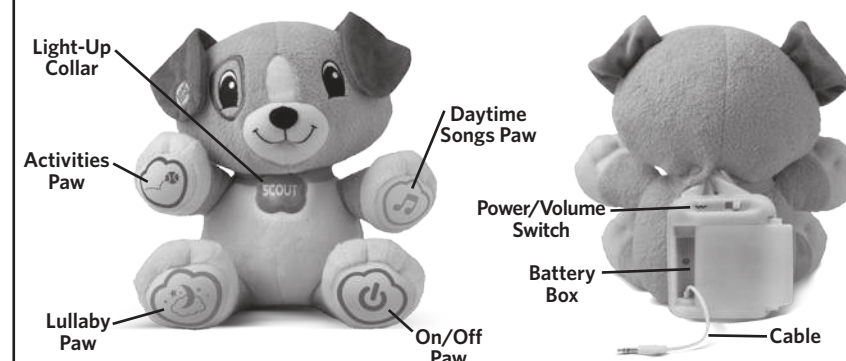

**Customize/Customise Your Puppy Pal!**

Before you play with or connect your puppy, remove the plastic pull tab from the back and discard.

**1. Go to [leapfrog.com/MyPals2](http://leapfrog.com/MyPals2)**

Please make sure you are connected to the internet on your tablet, smart phone or computer and go to [leapfrog.com/MyPals2](http://leapfrog.com/MyPals2). Create or sign in to your LeapFrog account and begin customizing/customising your puppy with:

- Your Child's Name: Select your child's name from our list of thousands.
- Your Child's Favorites/Favourites: Select your child's favorite/favourite animal, food and color/colour.

**2. Download**

Download your preferences from your device to your puppy in a few easy steps:

- Open the Velcro® fastening on the back of your puppy to access the battery box, slide open the battery box door to reveal the cable. (**Note:** Your puppy's Power/Volume switch must be in the On position to successfully connect to your device.)
- Connect the cable to your device's headphone jack. Then follow the webpage instructions to turn your device's audio volume all the way up and to begin the download.
- To confirm that your puppy is ready to play, touch any paw and your puppy will say "I'm ready to play now." Then, disconnect the cable and tuck it back into the battery box. Close the battery box door and make sure that it is securely closed. Close the Velcro fastener over the battery box.

**3. Play & Learn**

Stay connected with **Learning Path**, your guide to early childhood.

Track progress and follow your child's developing skills with our Learning Path newsletter.



Share & discuss hot topics with other parents and access free activities and printables online.

**Get personalized/personalised learning ideas**

to help your child grow with our free Learning Path App.



Learn more at [leapfrog.com/learningpath](http://leapfrog.com/learningpath)  
The LeapFrog® Learning Path is not available in all countries.

**HOW TO PLAY**

- Press the daytime songs paw to play an assortment of learning songs, personalized/personalised songs and melodic tunes just for baby.
- Press the activities paw to hear your puppy talk about your child's favorite/favourite things, count hiccups, pretend to be other animals and talk about feelings.
- The lullaby paw plays soothing lullaby music. Squeeze once to hear five minutes of music. Squeeze twice to hear 10 minutes of music. Squeeze a third time to hear 15 minutes of music.
- To turn off your puppy, press the On/Off paw. When your child is ready to play again, press any paw to resume play mode.
- To turn off your puppy completely, use the Power/Volume switch located on the battery box.



## INSTRUCTIONS FOR CARE AND USE

### Caring for Your Puppy

For indoor, dry-location use only. Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the product. Never try to dismantle it.

### Cleaning Your Puppy

Disconnect cable from your device before cleaning. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the product in water. Allow to dry before reuse.

### Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

### Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

### Informations sur les piles

Les piles incluses sont destinées à la démonstration en magasin et doivent être remplacées pour améliorer les performances du produit à la maison. Nécessite 3 piles alcalines AA (aussi appelées LR6 dans certains pays).

### Retrait et installation des piles

1. Ouvrir le compartiment des piles à l'aide d'un tournevis.
2. S'il y a des piles usagées ou à plat, les retirer du compartiment en tirant sur l'une des extrémités de chaque pile.
3. Installer les nouvelles piles comme indiqué sur le schéma de polarité (+/-) reproduit à l'intérieur du compartiment de piles.
4. Bien refermer le couvercle du compartiment de piles.

## IMPORTANT INFORMATION

### SAFETY INSTRUCTIONS

#### Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove used batteries from the product. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type (as recommended) are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** use rechargeable batteries. The product may not operate properly and may not function at all.

**DO NOT** short-circuit the supply terminals.

#### Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** recharger des piles non rechargeables. Les piles rechargeables ne doivent être chargées que sous la supervision d'un adulte.

**NE PAS** utiliser de piles rechargeables. Le produit pourrait ne pas fonctionner correctement ou NE PAS fonctionner du tout.

**NE PAS** court-circuiter les terminaux d'alimentation.

**⚠ CAUTION:** As packaged, a cable for adult's use in transferring data is accessible via an opened battery door. After data transfer and battery installation has been completed by an adult, the battery door is to be secured by the adult using a Phillips screwdriver. To prevent access to the cable, DO NOT allow child to play with the toy if the battery door is not secured.

**⚠ ATTENTION :** Comme emballé, un câble pour l'utilisation de l'adulte dans le transfert de données est accessible via une porte de batterie ouvert. Après le transfert des données et l'installation de la batterie a été complété par un adulte, la porte de la batterie doit être fixée par l'adulte à l'aide d'un tournevis cruciforme. Pour empêcher l'accès au câble, NE PAS permettre à l'enfant de jouer avec le jouet si la porte de la batterie n'est pas fixée.

**⚠ CAUTION :** Plug the puppy's cord directly into the 3.5mm jack on your smart phone, tablet or computer. Do not plug the cord into peripheral or external accessories, such as speakers, docks, etc.

**⚠ ATTENTION :** Le câble Jack 3.5mm doit être branché uniquement à un smartphone, une tablette ou un ordinateur. Ne pas Connecter le câble à d'autres périphériques externes comme des enceintes, dock, chaînes stéréo, etc.

**⚠ CAUTION:** Routinely check this product for proper and safe condition. If there is any damage or broken parts, remove product from use.

**⚠ ATTENTION :** Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

**⚠ CAUTION:** This is not intended as a crib toy. To prevent entanglement injury NEVER add strings, ties or other products to this item.

**⚠ ATTENTION :** Ce jouet n'est pas conçu pour les berceaux et les lits d'enfants à barreaux. Pour éviter tout danger d'enchevêtrement, ne JAMAIS rajouter de ficelles, rubans ou toute autre attache à ce jouet.

## TROUBLESHOOTING

Symptom	Try This
<b>Your puppy does not turn on or does not respond</b>	<ul style="list-style-type: none"><li>• Make sure the Power/Volume switch is in the On position</li><li>• Make sure batteries are correctly installed</li><li>• Make sure battery cover is securely attached</li><li>• Remove batteries and put them back in</li><li>• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth</li><li>• Install new batteries</li></ul>
<b>Your puppy operates erratically or makes loud noises</b>	<ul style="list-style-type: none"><li>• Follow the above instructions to clean battery contacts</li><li>• Turn your puppy off and install new batteries</li></ul>
<b>Your puppy does not detect your device even though the cable is connected to your device's headphone jack</b>	<ul style="list-style-type: none"><li>• Check to see if the cable is pushed all the way into the headphone jack</li><li>• Disconnect and reconnect the cable to your device. It might take a moment to recognize/recognise the toy.</li><li>• Increase your device's media volume level to high. (Smart phone users: Be sure to change media volume, not ringer volume.)</li><li>• Ensure your browser meets the Minimum System Requirements. Try using a different browser</li><li>• Try connecting the toy to a different device that meets the Minimum System Requirements</li><li>• Use the included cable attached to the battery box</li></ul>

For a more detailed list of troubleshooting hints and other helpful information, go to [leapfrog.com/support](http://leapfrog.com/support)

**⚠ CAUTION:** To be used under the direct supervision of an adult.

**⚠ ATTENTION :** Doit être utilisé sous la présence directe d'un adulte.

### SYSTEM REQUIREMENTS

#### Minimum System Requirements

Internet connection (high-speed connection recommended)

Smartphone, tablet or computer with 3.5mm headphone jack

#### Internet browser requirements:

#### PC:

Internet Explorer® 9.0+, Chrome™ (latest version), or Mozilla® Firefox® (latest version)

#### Mac Computer:

Safari 5.0 (or newer), Chrome™ (latest version), or Mozilla® Firefox® (latest version)

#### iOS:

Safari 5.0+ or Chrome™ (latest version)

#### Android™:

4.0 browser or Chrome™ (latest version)

#### FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

### Canada:

CAN ICES-3 (B) / NMB-3 (B)

### Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the adult to reset the device by removing and reinstalling the batteries.

### Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'adulte doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### CONSUMER SUPPORT

**U.S. Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.com/support](http://www.leapfrog.com/support) 24 hours a day.

**Canada Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.ca/support](http://www.leapfrog.ca/support) 24 hours a day.

**U.K. Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support) 24 hours a day.

**Australia Consumer Service Contact:** Please submit questions to our distributor's staff via email at [info@funtastic.com.au](mailto:info@funtastic.com.au).

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

### GARANTIE LIMITÉE :

Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisant pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

For information on how this product might be recycled, visit [www.leapfrog.com/recycle](http://www.leapfrog.com/recycle) or call (800) 701-5327.

TM & © 2014 LeapFrog Enterprises, Inc. All rights reserved.

[leapfrog.com](http://leapfrog.com)



Model Number 19156 for Scout and Model Number 19157 for Violet.

For ages 6-36 months./ Convient aux enfants de 6 à 36 mois.

Part number: 605-12152-B

Item number: 19156 (My Pal Scout) or 19157 (My Pal Violet)