



Mr. Pencil's Scribble & Write™




Parent's Guide

This guide contains important information. Please keep it for future reference.

91-003330-000 (US)

INTRODUCTION

Thank you for purchasing **Mr. Pencil's Scribble & Write™!** This tablet offers a comprehensive range of educational activities. For beginning learners it teaches letter and number names. More experienced learners can follow step-by-step instructions to draw shapes and write letters and numbers. Finally, games allow learners to practice everything from identifying letter sounds to spelling full words.

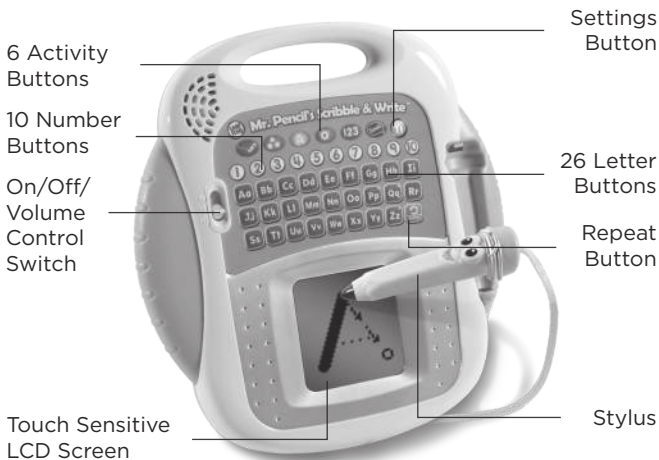

INCLUDED IN THIS PACKAGE

- One Mr. Pencil's Scribble & Write™ tablet
- One parent's guide

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

ATTENTION:


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE:

Please keep this parent's guide as it contains important information.

Unlock the packaging locks:


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

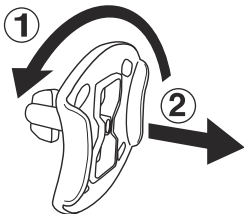

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 3 new AA (AM-3/LR6) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

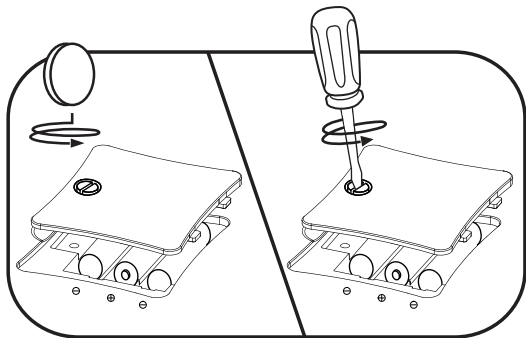


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

MISE EN GARDE


- Utilisez de nouvelles piles alcalines pour une performance maximale.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

Low Battery Indicator

When the batteries run low, this icon  will appear on the screen, flash twice and the unit will power off. Remove the old batteries and replace with a new set.



IMPORTANT NOTICE

Occasionally, the LCD touch screen may need to be recalibrated. If this happens, go to Settings Mode  to adjust it before resuming play.

A small dot will appear in each corner of the screen, you will hear a voice “Tap it!”. Use the stylus to touch each dot exactly. Another dot will appear after the previous one is touched correctly. The screen will show **OK** if the screen has been calibrated correctly. If a dot isn’t touched correctly, you will hear a voice “Oops! Try Again.”, the calibration will restart.



PRODUCT FEATURES

1. On/Off/Volume Control Switch

Slide the **On/Off/Volume Control Switch** to turn the toy on and select the volume.



2. Touch Sensitive LCD Screen

Touch the LCD screen to play.




3. Stylus

Use the stylus to tap and write on the screen.



4. Activity Buttons

Press one of the six activity buttons to select an activity.

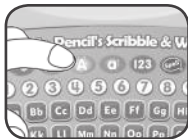

5. Settings Button

Press this button to change the contrast of the LCD screen, turn the background music on or off and to calibrate the LCD touch screen.



6. Repeat Button

Press this button to repeat an instruction or question.




7. Letter Buttons

Press these buttons to hear letter names and sounds.



8. Number Buttons

Press these buttons to hear number names.

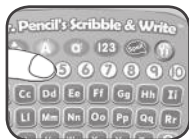


9. Automatic Shut Off

To preserve battery life, **Mr. Pencil's Scribble & Write™** will automatically power down after several minutes without input. The unit can be turned on again by pressing any button.


ACTIVITIES

1. Free Draw

Get creative! Tap or drag anywhere on the screen to draw. The following icons can help:

Eraser  - Tap to turn the tip of your stylus into an eraser. Only what you touch will be erased.

Pencil  - Tap to draw.

“X”  - Tap this to erase your entire drawing.

Check Mark  - Tap this when you are finished.



2. Shapes

From the shape menu screen tap the arrows to see the different shapes. Tap a shape to select it. Then follow the dotted lines to trace the shape.



3. Uppercase Letters

Press a letter to learn how to write the uppercase version of it. Follow the dotted lines. They will show you exactly how to draw perfect letters using the correct stroke order.



4. Lowercase Letters

Same as the activity above but now with lowercase letters.



5. Numbers

Same as the activities above but now with numbers. Correctly tracing a number transforms it into objects that equal the number's value. Tap them to count.



6. Spelling

Use the stylus to choose your level.

Level 1 = Letter sounds

Level 2 = Fill in the missing letter

Level 3 = Letter by letter spelling

Levels 1 and 2 will require the user to tap answers using the stylus.

Level 3 will require the user to spell words by pressing the physical letter buttons on the toy.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

Environmental phenomena.

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement.

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**CLASS 1
LED PRODUCT**



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

***For warranty information, please visit
leapfrog.com/warranty.***

LeapFrog Enterprises, Inc.,
a subsidiary of VTech Holdings Limited.
TM & © 2017 LeapFrog Enterprises, Inc.
All rights reserved.
91-003330-000 (US)