

Next steps for learning fun!

CAUTION: Toy may contain flashes or patterns that may trigger photosensitive seizures.

ATTENTION: Les utilisateurs de ce jouet peuvent être victimes d'une attaque ou d'un évanouissement déclenché par les lumières ou les motifs clignotants (symptômes reliés à l'épilepsie).

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION: Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

FCC Compliance Statement. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment. CAN ICES-3 (B) / NMB-3 (B)

Environmental phenomena. The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement. Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

Recycle. Find out how to recycle this product at leapfrog.com/recycle or call (800) 701-5327. For UK consumers, visit leapfrog.co.uk/recycle.



Count Along Register/Till
2+ years



Musical Rainbow Tea Party
1+ year



Scribble and Write
3+ years



Learn & Groove™ Musical Mat



CONSUMER SUPPORT

U.S. leapfrog.com/support
U.K. leapfrog.co.uk/support

Canada leapfrog.ca/support
Australia funtastic.com.au

WARRANTY INFORMATION

Limited warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country.

Garantie limitée. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays.

TM & © 2016 LeapFrog Enterprises, Inc. All rights reserved. LeapFrog.com

For ages 2 years and up. Convient aux enfants à partir de 2 ans.
Item number 19310 / Part number 605-12304-A

Products sold separately and may not be available in all countries. Actual products may vary.




Ahead.

Find out more at leapfrog.com

Parent Guide

This guide contains important information.
Please keep it for future reference.

Features

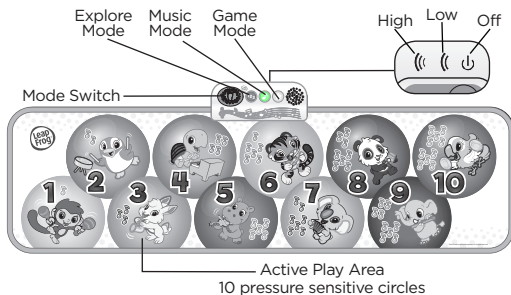

Get Started

Before playing, kids need to remove both shoes and socks. To turn the toy on, slide the orange Volume switch from the Off position to either Low or High volume.

How to Play

There are 3 ways to play: Explore, Music and Game modes. To change modes, step on the Mode switch to move to the next mode.

123 Explore Mode

Step on the circles on the mat for open-ended play to explore numbers, instrument names and sounds, plus animal character names through gross motor movements.

Music Mode

Step on circles 1-9 to hear 1 of 9 recognizable/recognisable children's tunes or step on Circle 10 for Free Play. For Song Play: once the tune starts playing, each step on a circle will play a riff of that specific instrument, overlaid on top of the background tune. For Free Play, each step on a circle will play a note of that specific instrument, overlaid on top of the background tune.

Game Mode

Listen and follow the audio instructions to make as many correct moves before the sequence ends. Each game starts with Animals then ends with Numbers.

Battery Information.

Requires 3 AAA (called LRO3 in some countries) alkaline batteries. Batteries included are for in-store demonstration, and should be replaced for home use.

Nécessite 3 piles alcalines AAA (appelées LRO3 dans certains pays).

Les piles incluses sont destinées à la démonstration en magasin et doivent être remplacées pour une utilisation à la maison.

Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or dead batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety. Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Rechargeable batteries are to be removed from the toy before being charged, rechargeable batteries are only to be charged under adult supervision. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. If the toy suddenly stops working, the voice becomes faint or the sound seems weak, the problem may be low battery power. If this is the case, install new batteries.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Sécurité relative aux piles. Les piles sont des objets de petite taille et peuvent constituer un risque d'étouffement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Les accumulateurs doivent être chargés uniquement sous le contrôle d'un adulte. Les accumulateurs doivent être enlevés du jouet avant d'être chargés. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les bornes d'alimentation.

Les accumulateurs doivent être chargés uniquement sous le contrôle d'un adulte. Les accumulateurs doivent être enlevés du jouet avant d'être chargés.

For indoor, dry-location use only. Keep food and beverages away from product.

Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight.

Avoid dropping the unit. Never try to dismantle it.

Utiliser uniquement en intérieur, dans des lieux secs. Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). N'utilisez pas de savon, de lessive, ou d'autres produits chimiques. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux températures extrêmes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

Safety & Care Information.

- Observe all warnings and cautions shown on the backside of the game controller.
- Do not use or store in dusty, dirty areas.
- Do not store in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.
- Do not store in very cold areas. When the system warms up, moisture can form inside the case, which may damage electronic circuit boards.
- Do not attempt to open the case. Non-expert handling of the device may damage the system.
- Avoid dropping or hitting with force.
- Always use the game on a flat surface.
- Do not wash the play mat in a washing machine or by submerging in water.
- Spot clean with a damp cloth only
- Do not use scissors or any sharp items on or near the play mat. Do not fold the mat frequently. Store flat to prevent circuit breaks.

Sécurité et information sur les soins.

- Respectez tous les avertissements et mises en garde figurant sur la face arrière du contrôleur de jeu.
- Ne pas utiliser ou stocker dans les endroits poussiéreux.
- Ne pas entreposer dans des endroits chauds. Des températures élevées peuvent abréger la vie des appareils électroniques et fausser ou faire fondre certains plastiques.
- Ne pas stocker dans des endroits très froids. Lorsque le système se réchauffe, l'humidité peut se former à l'intérieur du boîtier, ce qui peut endommager les circuits électroniques.
- Ne tentez pas d'ouvrir le boîtier. Une manipulation de l'appareil peut endommager le système.
- Evitez de laisser tomber ou un choc violent.
- Toujours utiliser le jeu sur une surface plane.
- Ne pas laver le jeu - utilisez un chiffon doux humide pour nettoyer le tapis.
- Ne pas utiliser de ciseaux ou des objets pointus sur ou près du tapis de jeu. Ne pas plier le tapis fréquemment. Stocker à plat pour éviter les ruptures de circuits.